


Duct Arch
Mounting System
(SafeTrack)

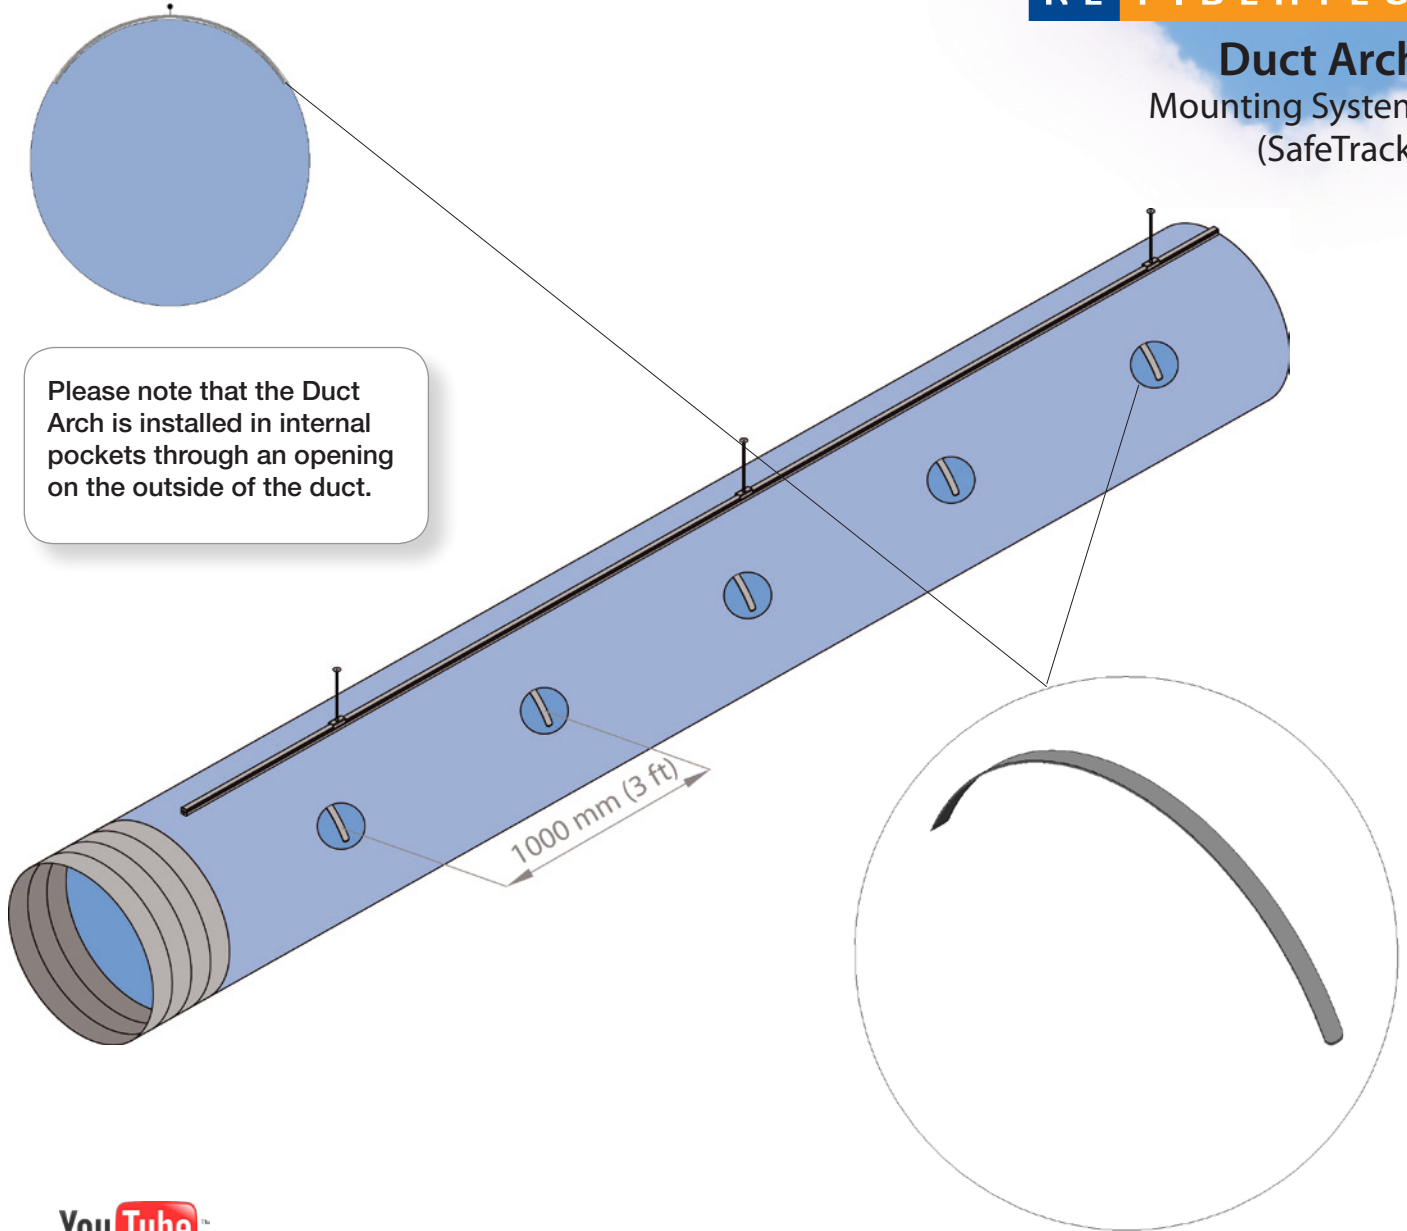

Please note that the Duct Arch is installed in internal pockets through an opening on the outside of the duct.



KE Fibertec



Scan the code with your smartphone and watch the installation guide on the KE Fibertec YouTube channel.

Duct Diameter		Weight		Reduction in sagging	
[mm]	[inch]	[g]	[oz]	[%]	
400	16	97	3,5	25	
450	18	108	3,9	25	
500	20	120	4,3	25	
560	22	135	4,8	25	
630	25	151	5,4	25	
710	28	170	6	25	
800	32	191	6,8	25	
900	35	215	7,6	25	
1100	43	262	9,3	25	
1200	47	286	10,1	25	
1220	48	291	10,3	25	

- 1 Install the duct according to the standard mounting installation supplied with the duct system.
- 2 The Duct Arch concept consists of curved aluminium arches that are inserted into prefabricated pockets in the upper side of the duct for every 3 ft/1000 mm. The arches are **not** preinstalled from the factory.
- 3 Slide the Duct Arch into the pocket, either before or after inflating the duct.

