



D-Safetrack Suspension for KE-Interior System

DS-0003-US-04

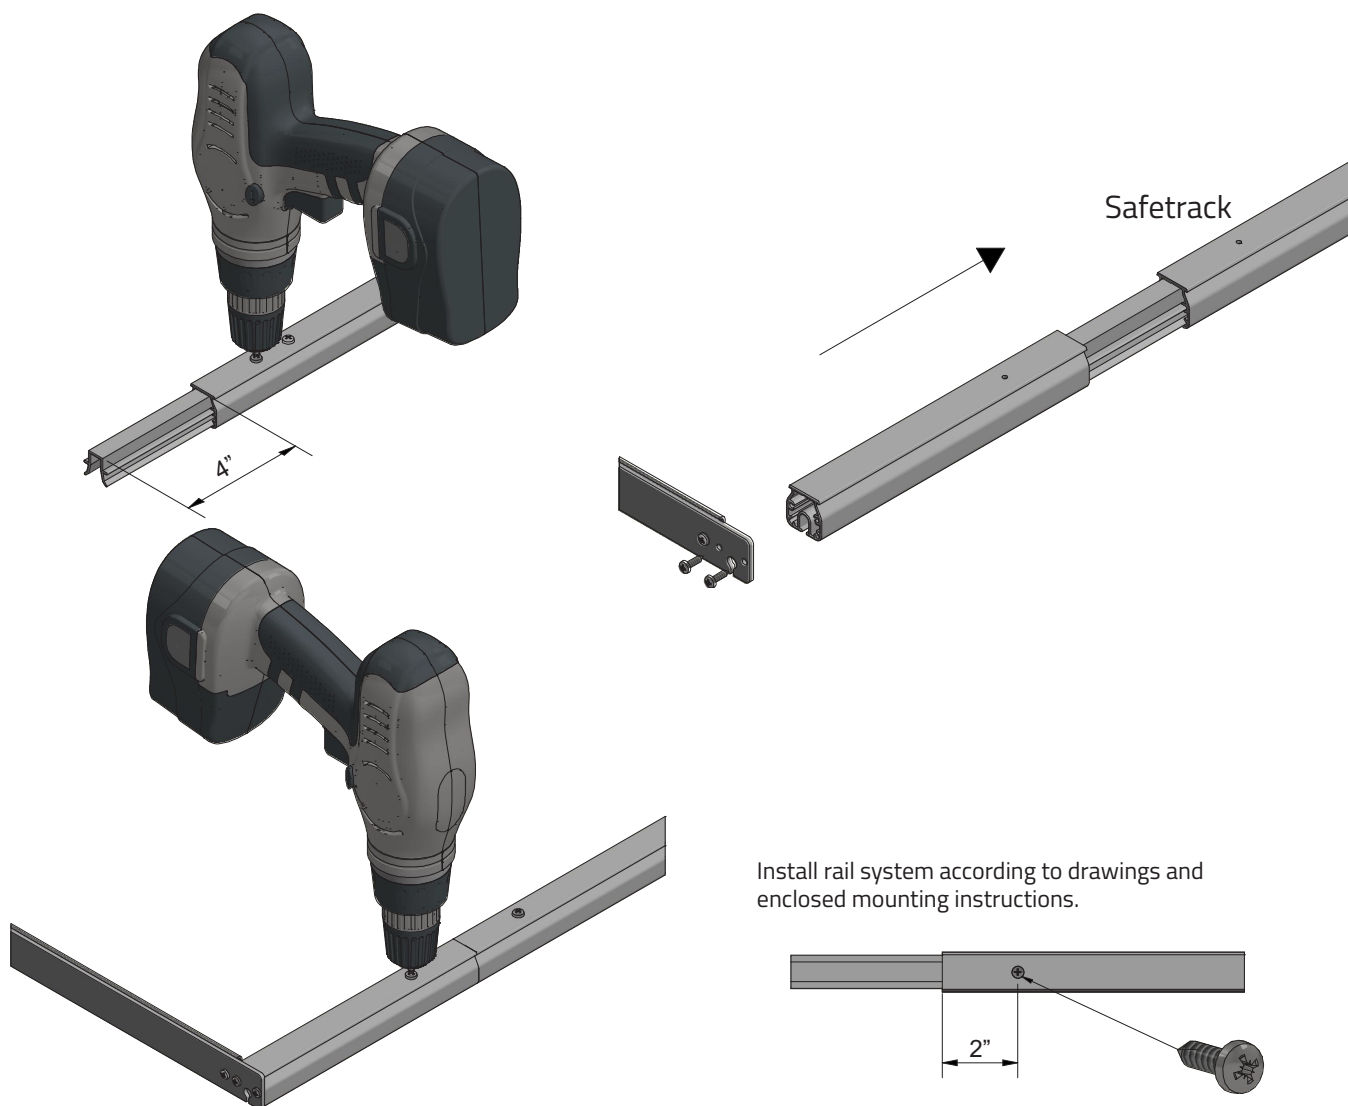

Suspension type


Refer to the delivery note for chosen suspension type.

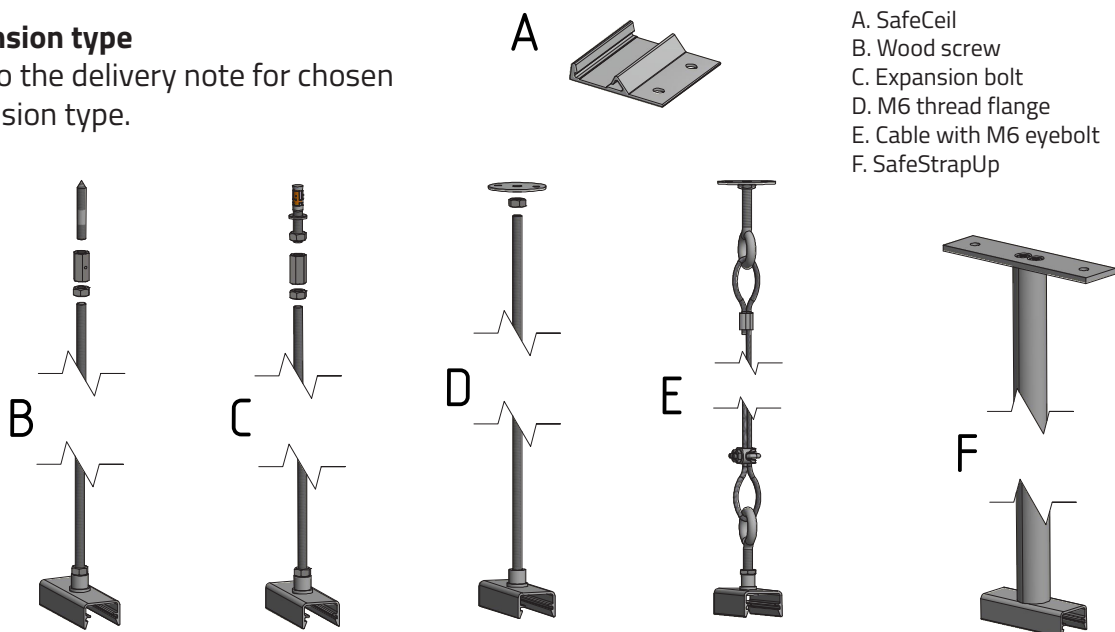


D-Safetrack for KE-Interior System (Straight Duct)

DS-0004-US-02


Min. height (LS) edge/cord = 2"
Max. diameter ($\emptyset$) = W - 2"

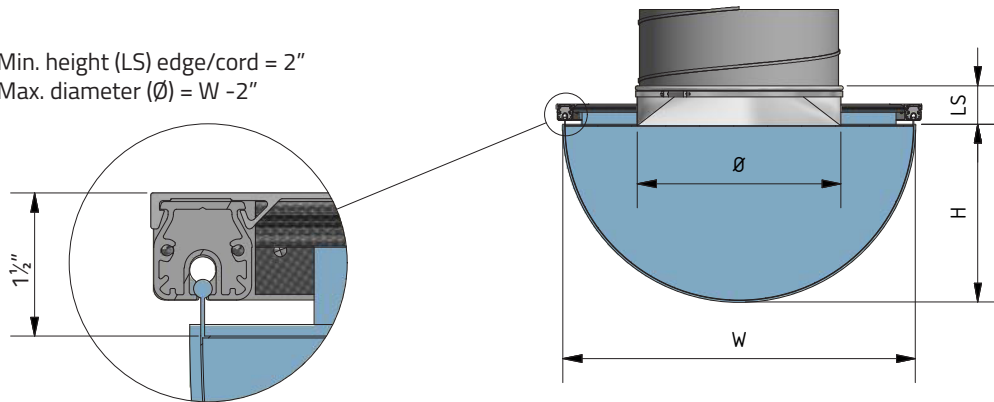



L = Duct length
LS = Length socket
 $\emptyset$ = Socket diameter
H = Height
W = Width
O = Offset
A = Distance socket 1
B = Distance socket 2

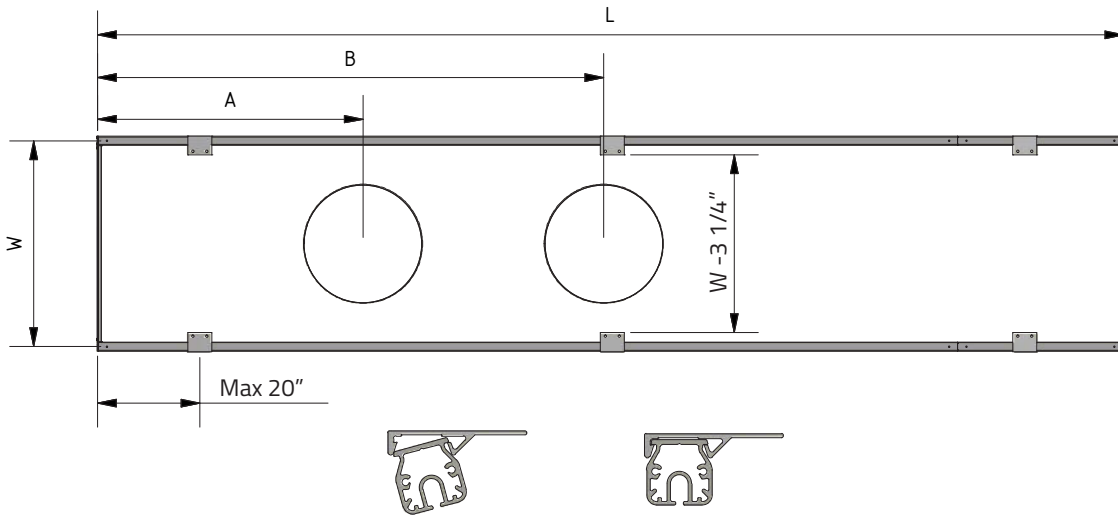

If it is possible to mount the socket above a false ceiling, a zipper near the socket on the duct is not necessary.

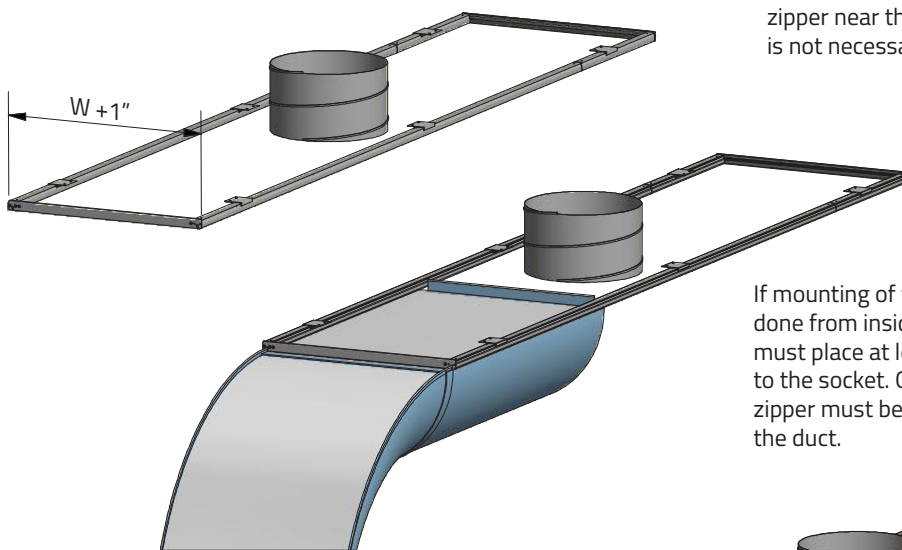


If mounting of the socket must be done from inside the space you must place at least 1 zipper close to the socket. Otherwise a service zipper must be placed in the arc of the duct.




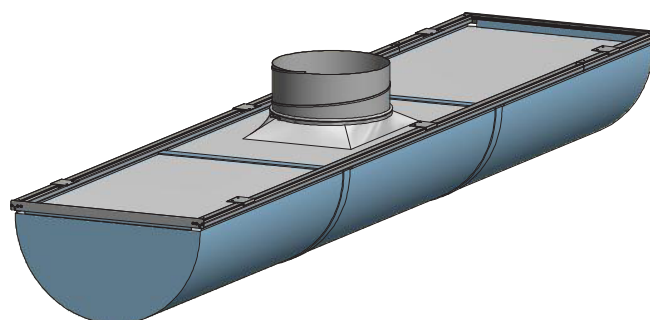
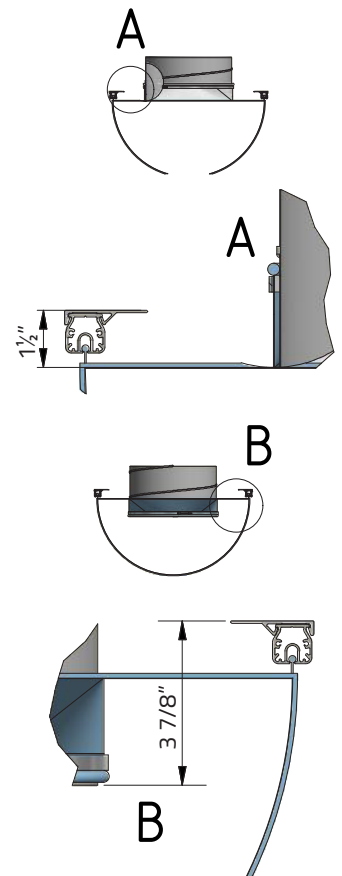


D-Safetrack for KE-Interior System (Inlet Options)

DS-0005-US-02

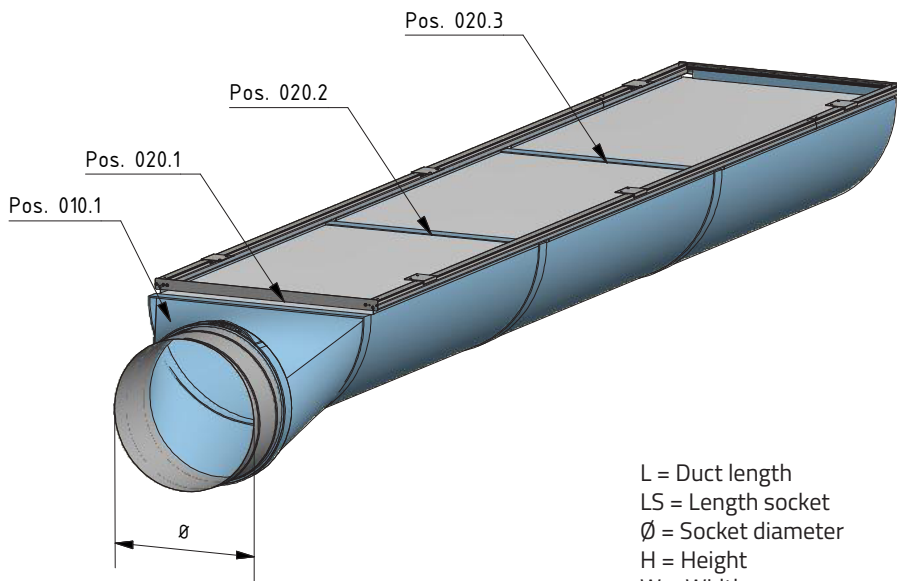


L = Duct length
 LS = Length socket
 Ø = Socket diameter
 H = Height
 W = Width
 O = Offset
 A = Distance socket 1
 B = Distance socket 2

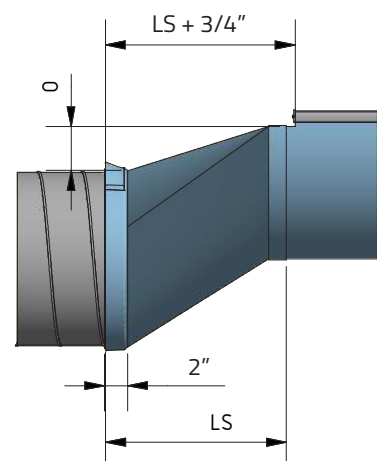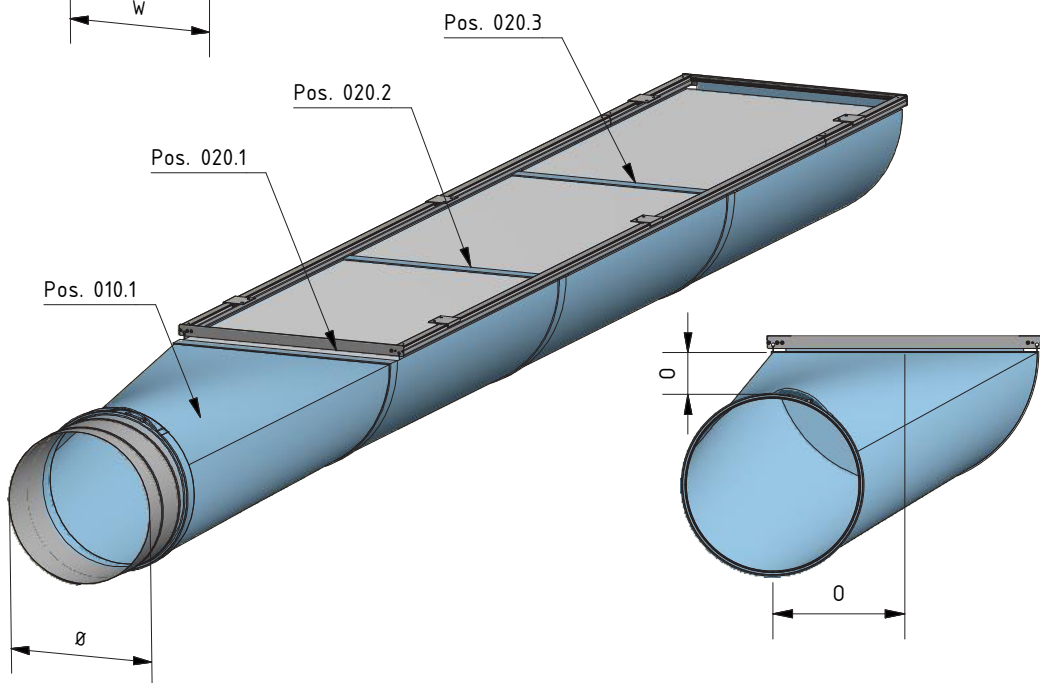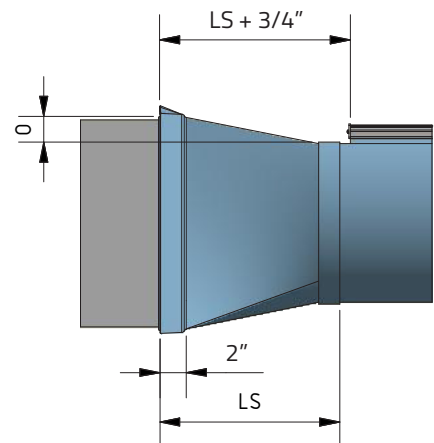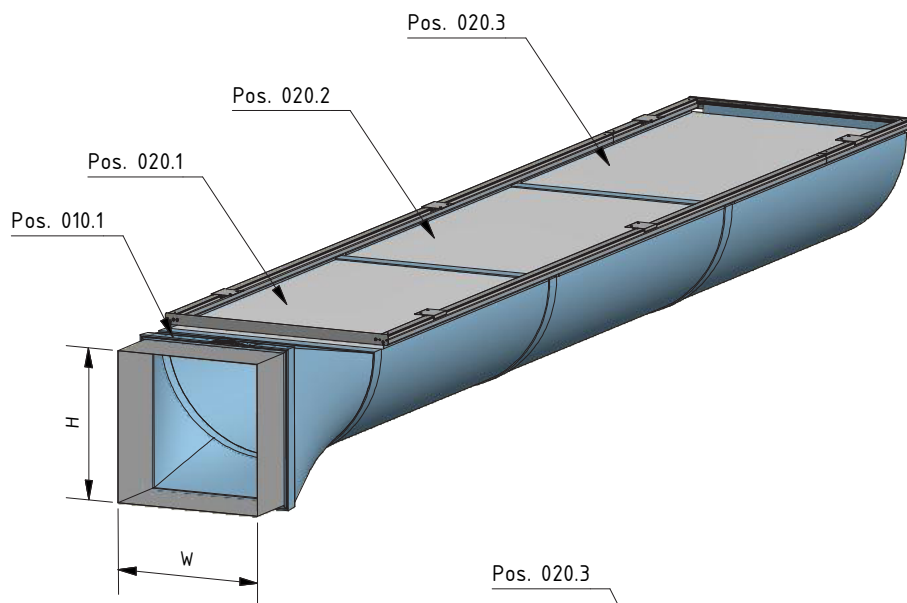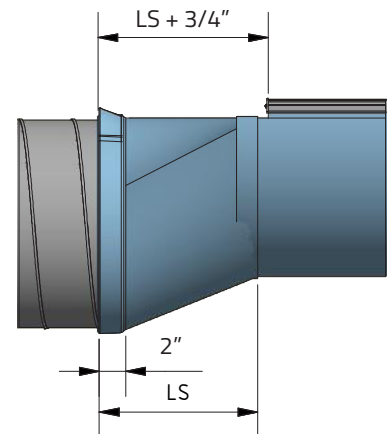


D-Safetrack for KE-Interior System (Plenum)

DS-0006-US-02

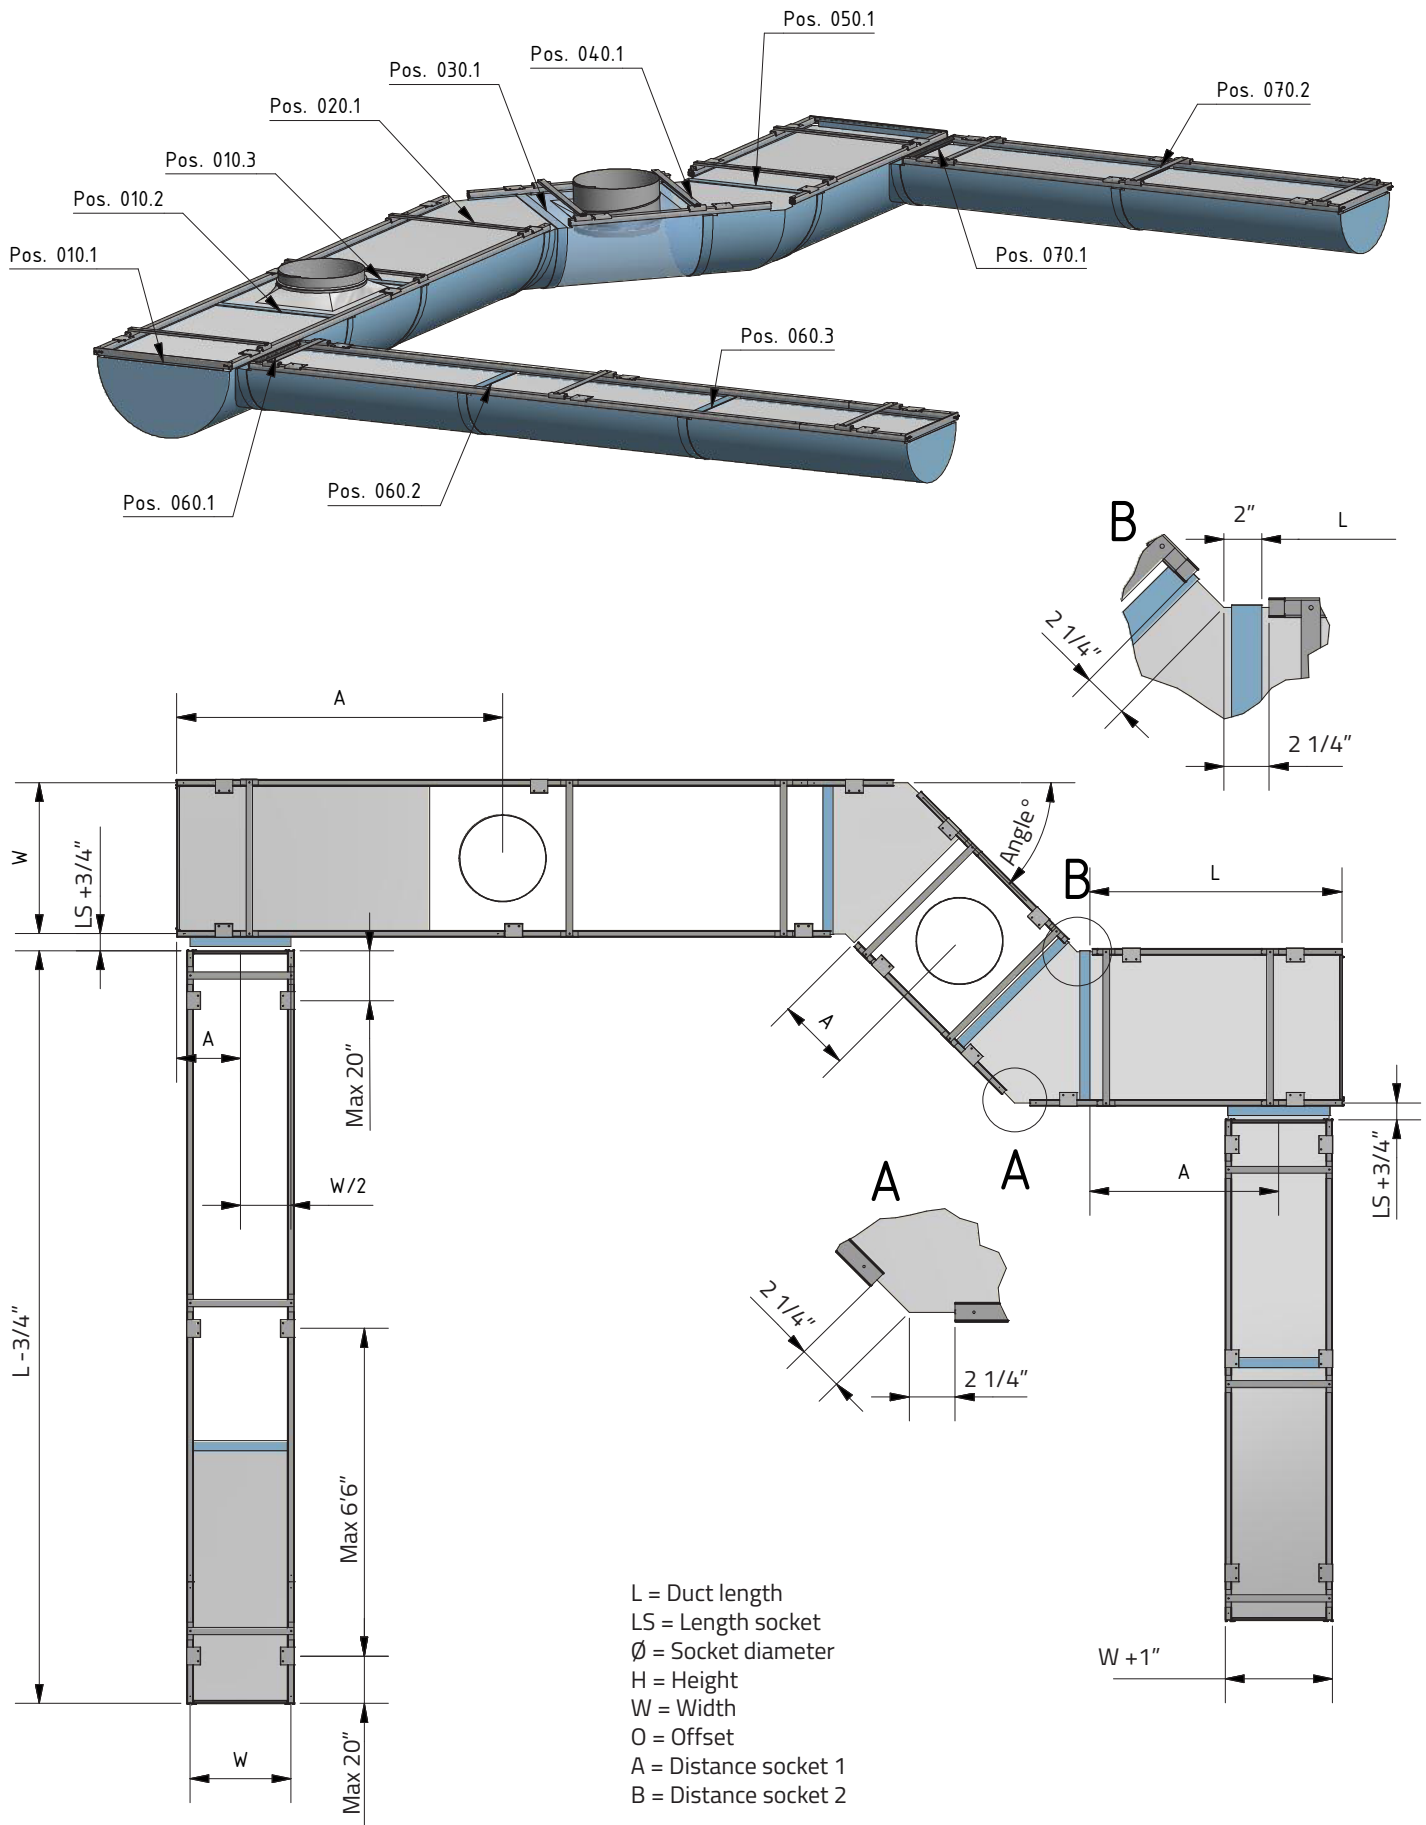


D-Safetrack for KE-Interior System (Suspended Duct)
DS-0007-US-03

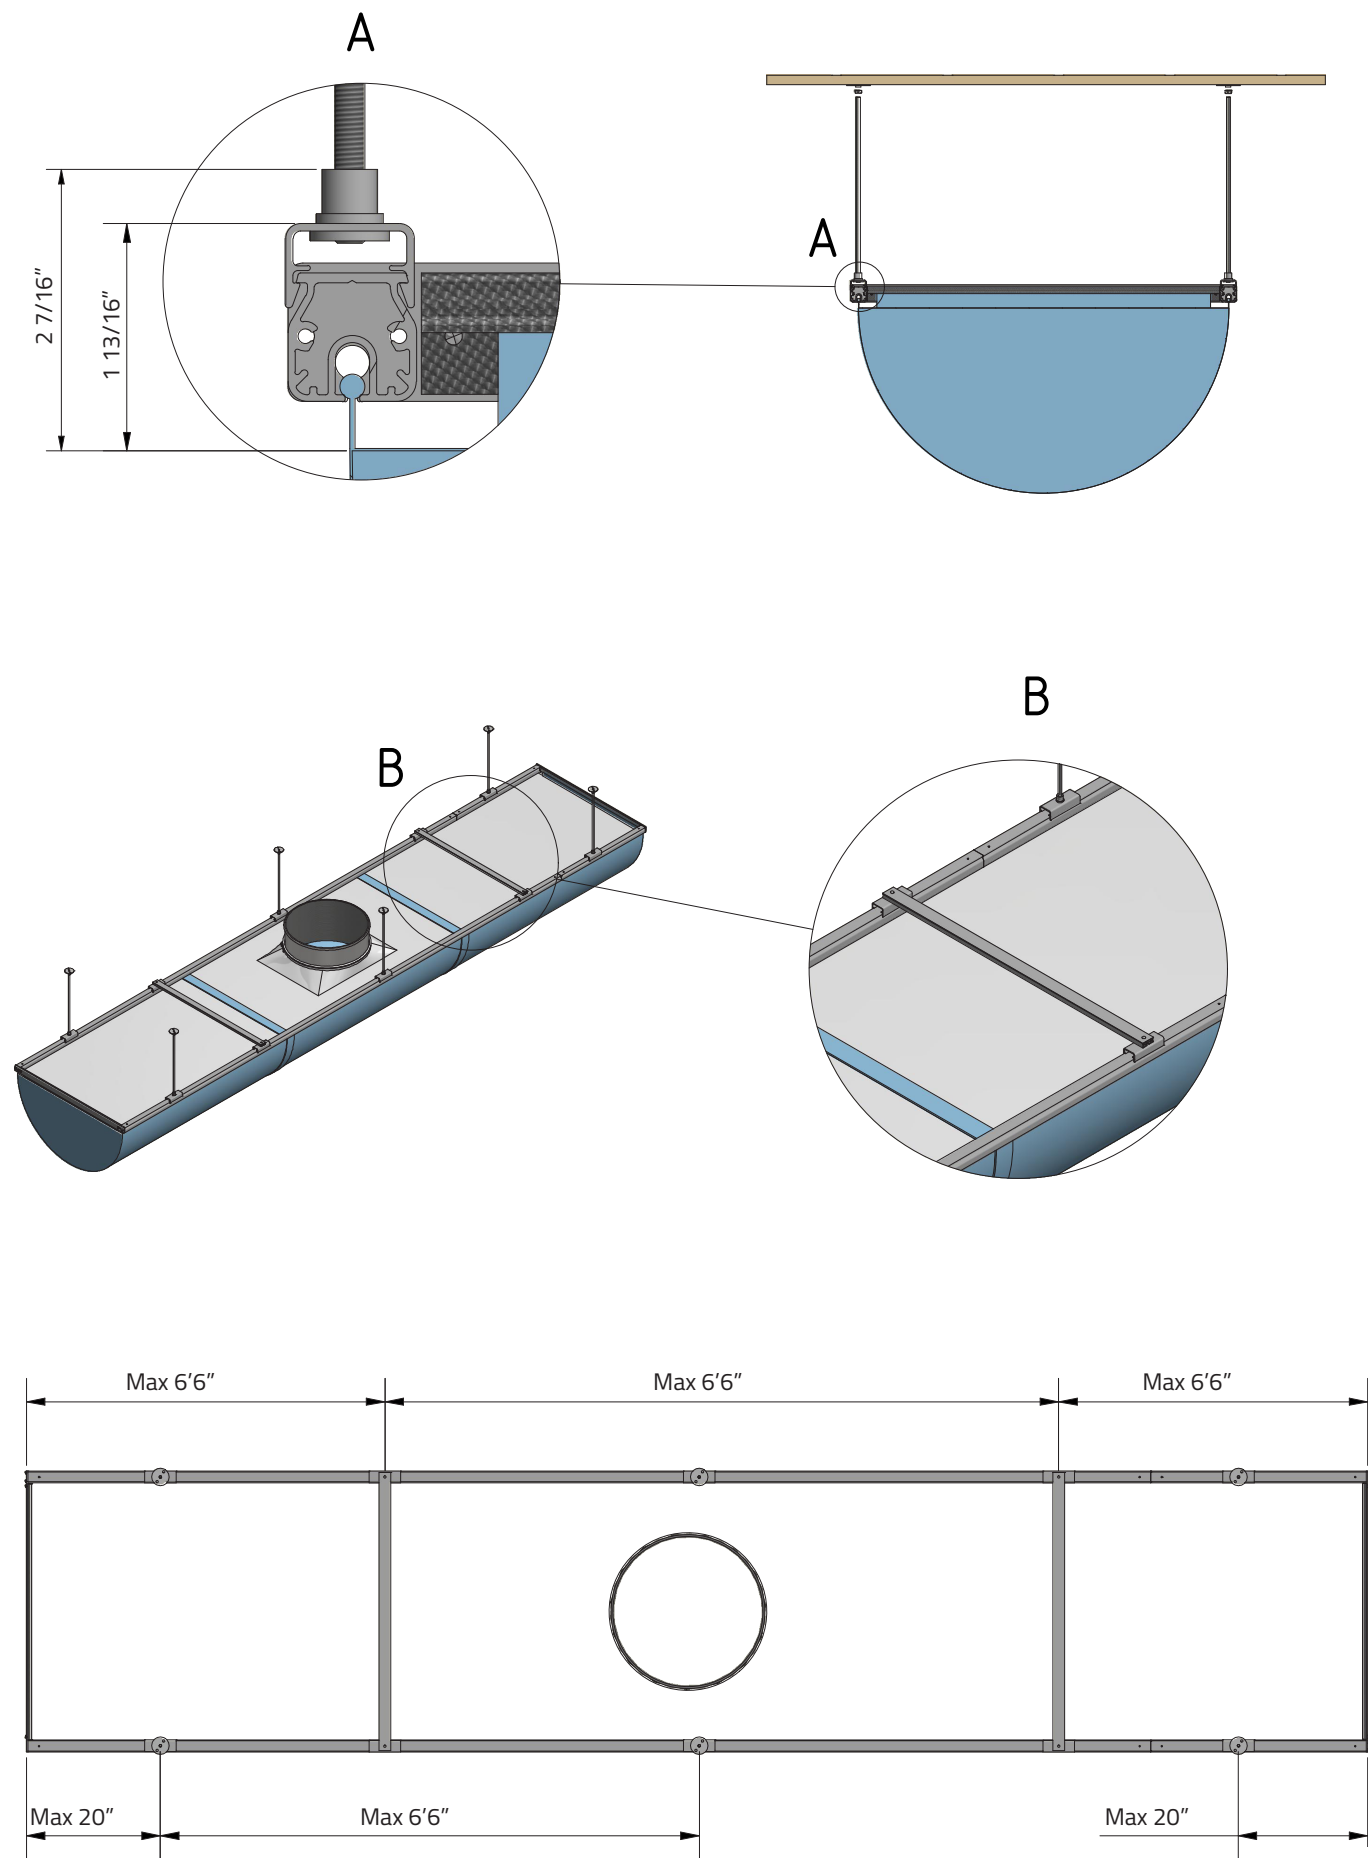



D-Safetrack for KE-Interior System (Mitered Elbow)

DS-0008-US-02



See delivery note for specific angle

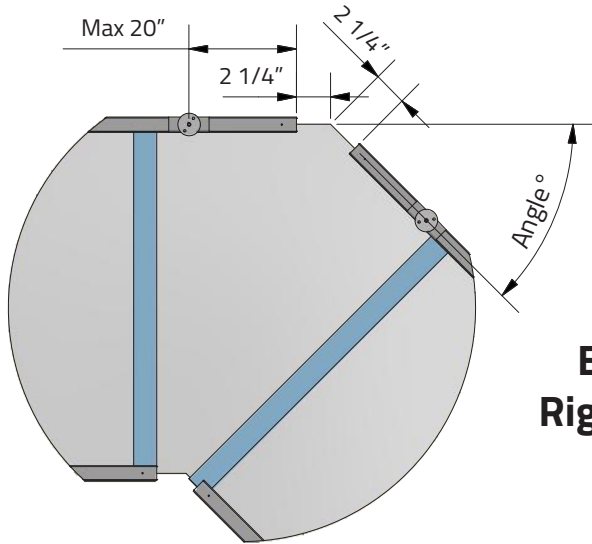


**Elbow
Right/Left**

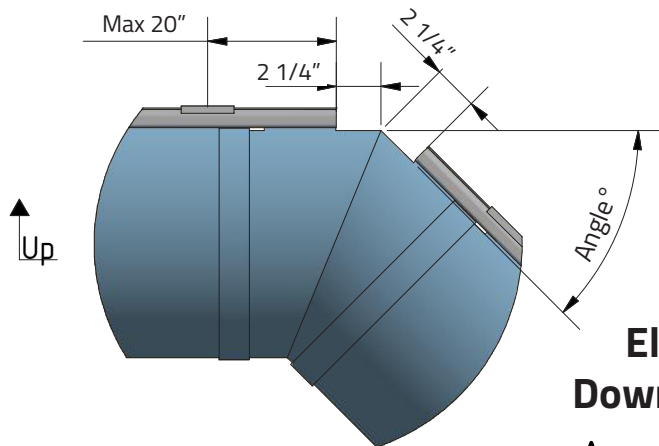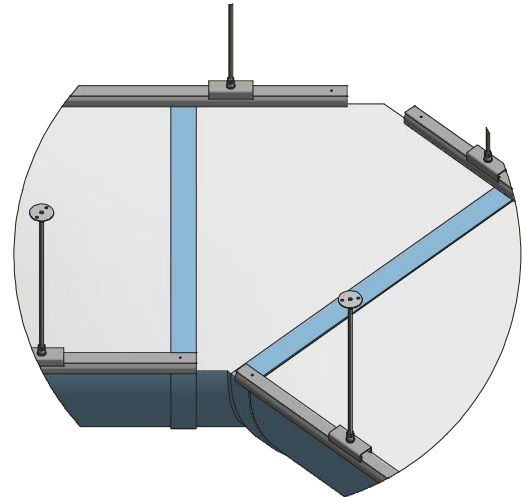

**Elbow
Downwards**

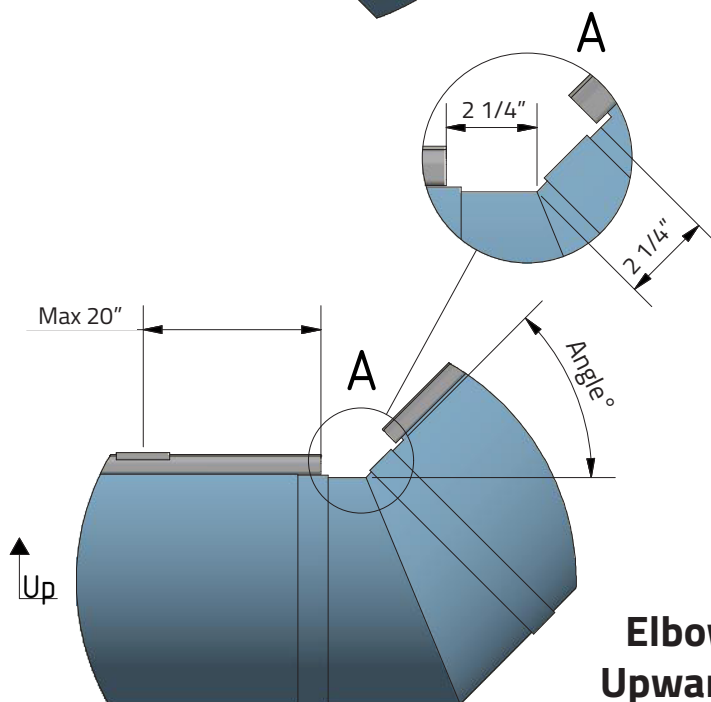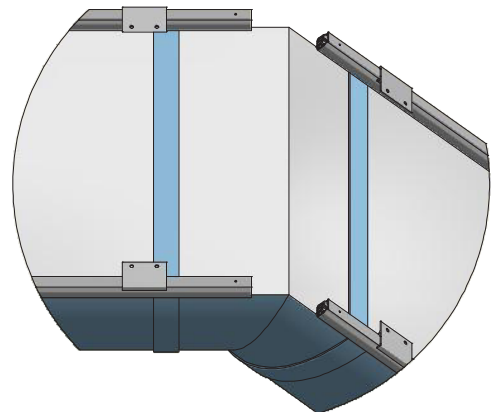


**Elbow
Upwards**


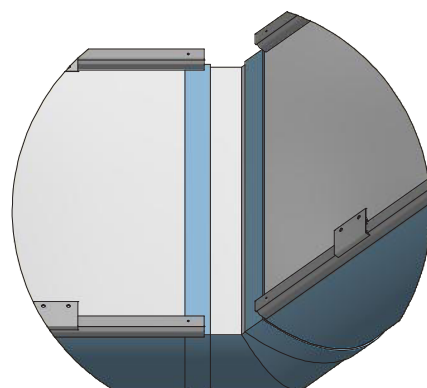


D-Safetrack for KE-Interior System (Mitered Elbow 90°)




DS-0009-US-02

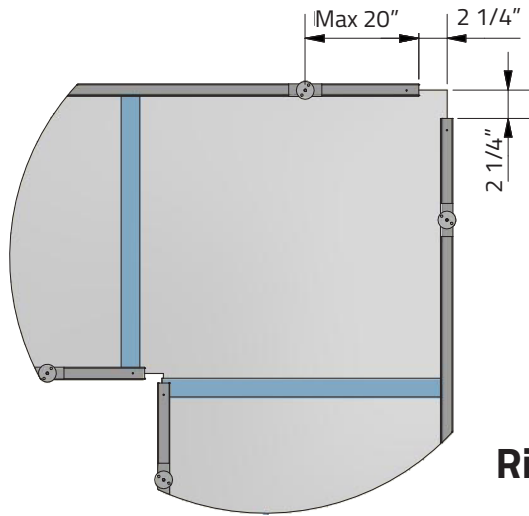

**Elbow
Right/Left**

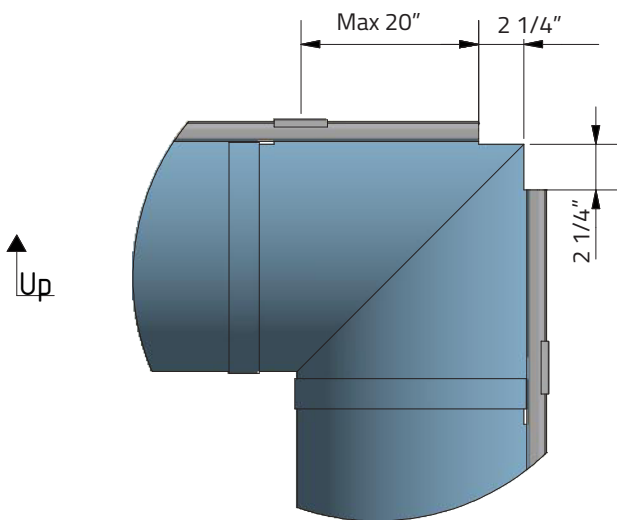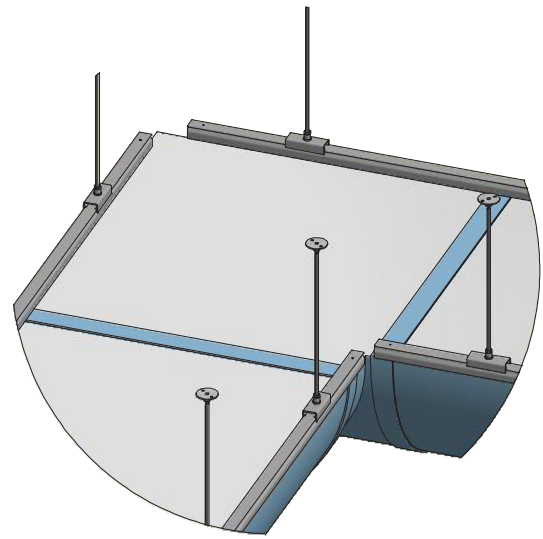

**Elbow
Upwards**

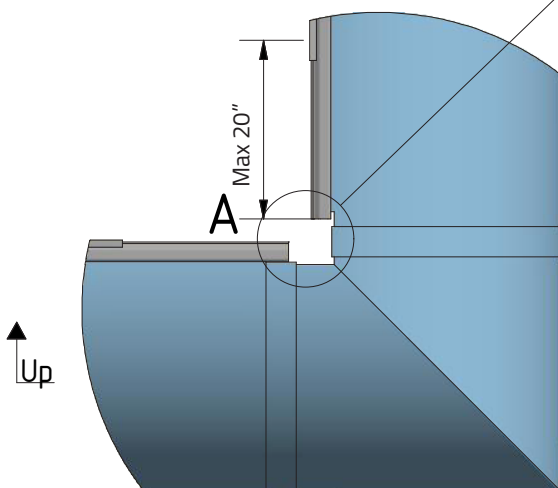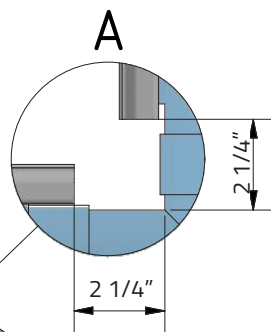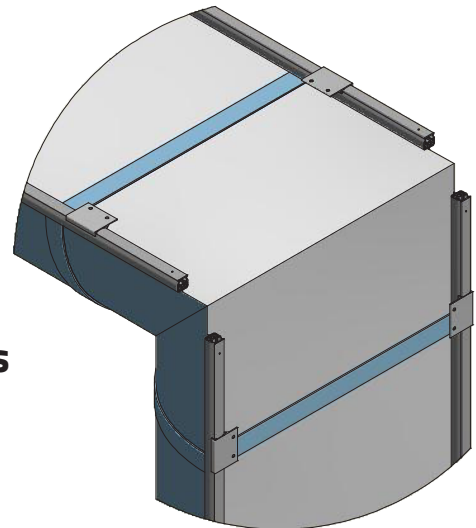

**Elbow
Downwards**

